

ACT makes heavy duty steps that can be attached to the back of the van:




The combination of a step and a tow-bar on a large Van can be done in 2 ways:

- First of all, it is possible to install two steps, one on each side of the towing hook.



- Secondly, it is possible to mount a coupling system together with an additional step. This step can turn away when it touches the drawbar in the curve.

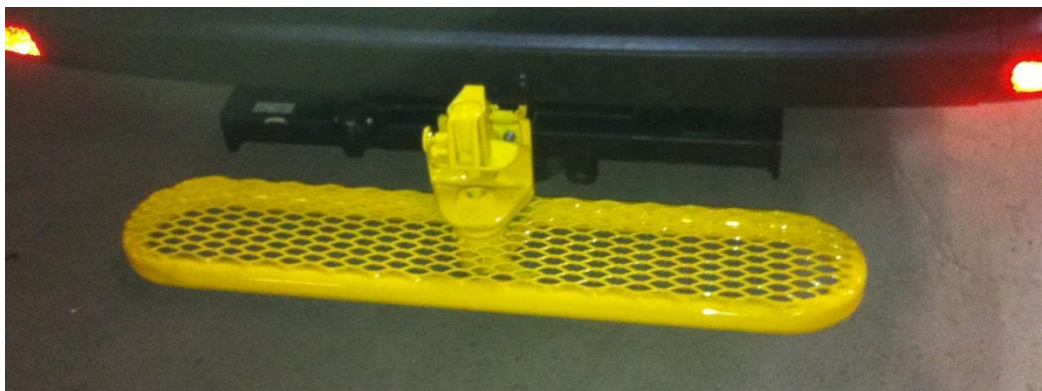

For the Large Vans we can provide a towbar for almost every type and every trailer-hook.


We can deliver traditional ball couplings and Rockinger automatic couplings.

We can deliver the tow-bars with the 7 or the 13 pole plugs.



### Automatic coupling

For those who want to equip their vehicle with an automatic coupling system and a traditional ball coupling, the ideal solution is to install a changeable coupling system, so that you can change the 2 systems by a twist of your hand.

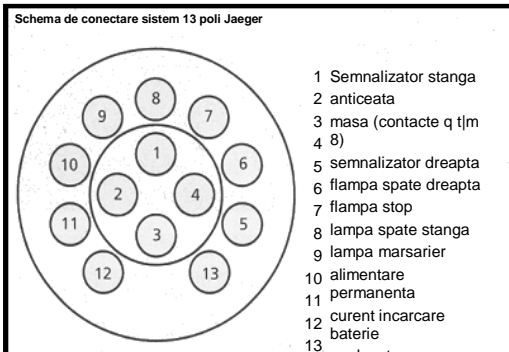

masa (contacte p t/m)  
12)

**ACT**

**RESEARCH**

Leuvensesteenweg 456  
3071 Kortenberg

tel. +32 2 757 01 02 - fax.+32 2 757 06 38

**ACT**

**ROMANIA**

Doamna Stanca 131  
505200 Fagaras

Tel. +40 268 21 16 12 - fax.+40 268 21 33 11

